
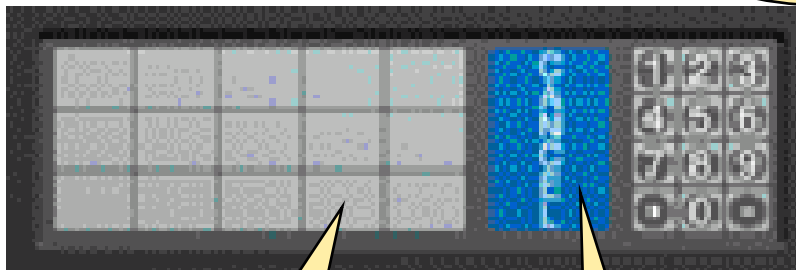


How operators interact with PanelMate 1500-1700 series

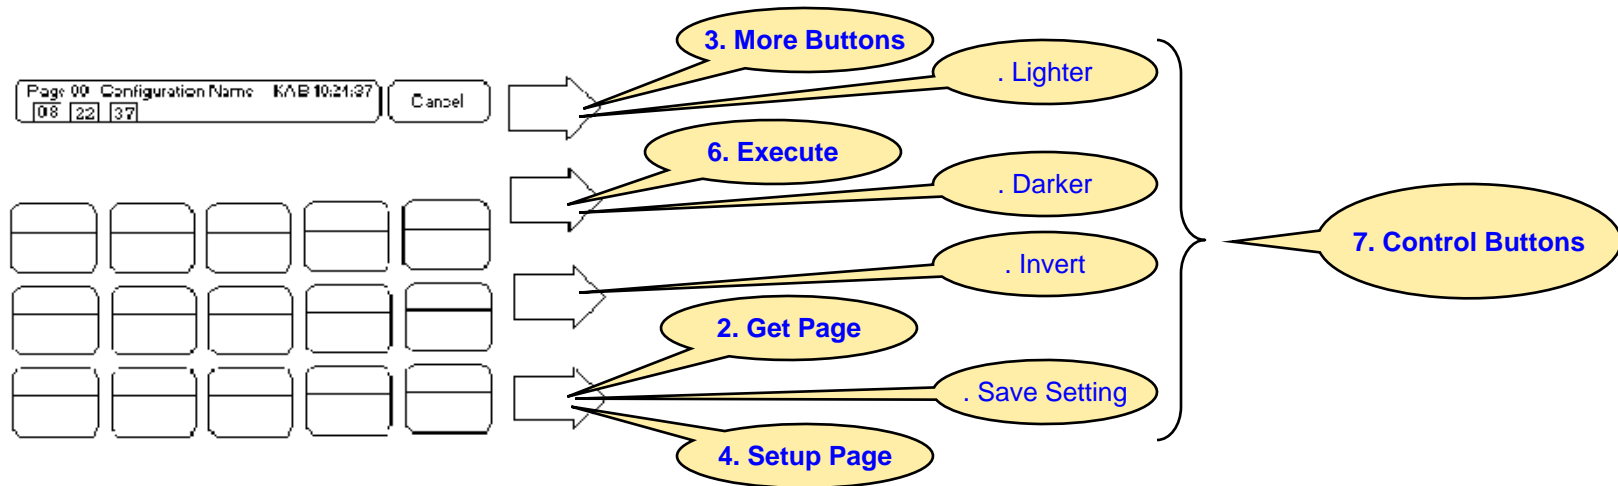

5. Adjust Contrast Selection

1. Cancel

Panelmate Power Series Instruction - Adjust Contrast

1. Select the 'CANCEL' template.
2. Press the control button labeled 'Get Page'.
3. Press the control button labeled 'More Buttons'.
4. Press the control button labeled 'Setup Page'.
5. Select the 'Adjust Contrast' template.
6. Press the control button labeled 'Execute'.
7. Press the control button labeled 'Lighter' or 'Darker' to adjusting screen contrast. When completed, press the control button labeled 'Save Setting'.